

## **INSTRUCTIONS**

Read all the instructions carefully before you use the product and keep them for future use.

### **BEFORE USE**

1. Ensure the packaging of this product is disposed of properly as all materials are recyclable and keep plastic bags away from babies and children.
2. Wash all parts before first use according to the following instructions.

### **CLEANING**

- Clean the cookware each time before and after using it.
- Wash all parts with warm, soapy water using a dish cloth. Rinse thoroughly to remove any soapy residue.
- Do not allow the cookware or any accessory to soak for long periods of time in the sink.
- Dry the cookware thoroughly with a clean and soft towel.
- Do not use hard tools or scouring pads, abrasive or oven cleaners, solvents or bleach to clean the cookware.
- Do not put the cookware directly into cold water immediately after use. Leave the cookware to cool down and then wash with soapy warm water and soft sponge.
- Sometimes because of the extreme hardness of water, some white spots may form on the bottom of the cookware. These spots can easily be removed either using vinegar or descaler.
- This cookware is suitable for dishwasher machine.
- Do not put this cookware or any of the accessories in disinfector machine.

### **APPROPRIATE HEAT SOURCES**

This cookware is suitable for Electric, Ceramic, Halogen, Gas Stove and Induction.



### **! ATTENTION! - IMPORTANT SAFEGUARDS**

1. This cookware is designed for domestic use only. No responsibility is accepted for damage resulting from use non-compatible with the instructions.
2. This cookware must be used only for the purpose of cooking, for which it was designed. Do not use the cookware for a purpose other than the one for which it is intended.
3. Do not over fill the cookware in order to prevent overflow of water during boiling.
4. Do not overheat the cookware when it is empty!
5. Always place the cookware on a stable stove that is installed on a flat and stable surface.
6. The diameter of the stove should not be bigger than the diameter of the bottom of the cookware.
7. If you are using gas stove, make sure that the flames do not extend up the sides of the cookware's main body.
8. Do not place the cookware into a microwave oven, electric oven, gas oven or any other type of heated oven.
9. Always use the handles when you need to move the hot cookware. If necessary, use heatproof gloves. Do not touch any hot surfaces. Do not let bare skin or eyes touch heated surfaces.
10. Do not place the cookware on any heat sensitive surface when hot.
11. Make sure that the plastic parts of the cookware are always away from sources of high temperature as they can be deteriorated and destroyed.
12. Always make sure the cookware is clean and dry before storing it.
13. Do not store the cookware while it is still warm.
14. Always store the cookware in a clean and dry place.
15. Do not leave the cookware filled with liquid and foodstuff for a long time.
16. This cookware should only be used by adults.
17. Keep this cookware away from children.



The product complies with the Regulations on materials in contact with foodstuff.